HOME DECORATORS

collection®

BRENTFORD CONSOLE

Assembly Instructions

HDC #:05480 MFG #:TF0027

Please read over the instructions; it will be a time-saver in the long run.

Note: Before Assembly,please be sure to work on a soft flat surface to avoid any damage to the finish.

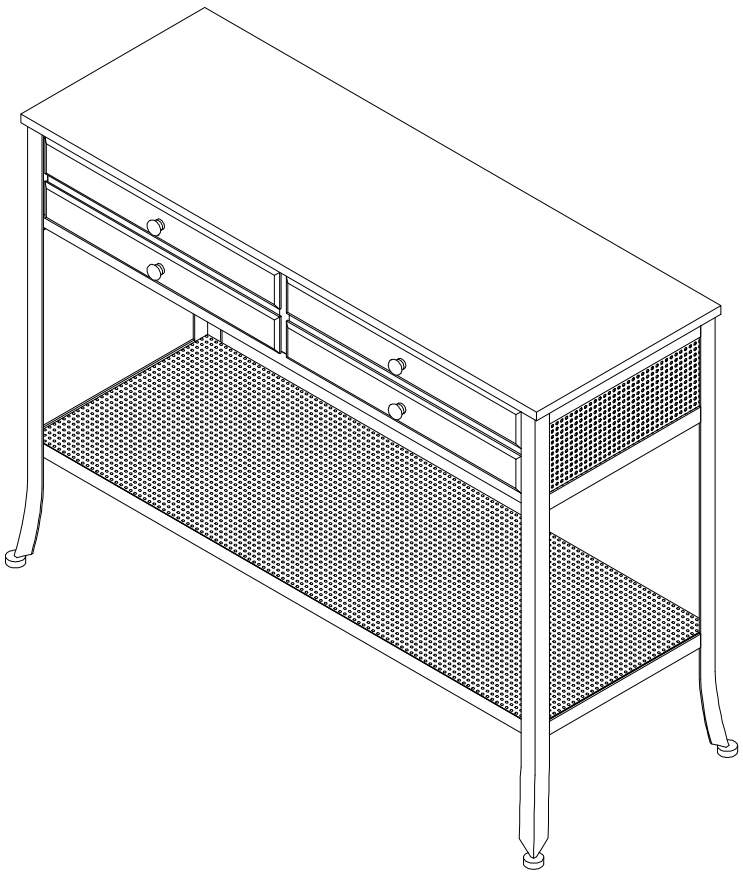

Parts Check List

Please remove all the parts carefully from the box.Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

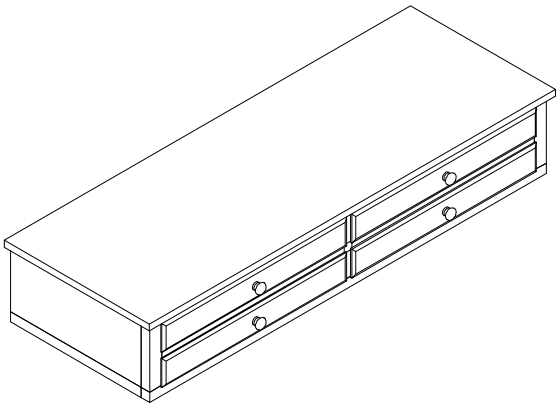

① **Top Frame - 1**

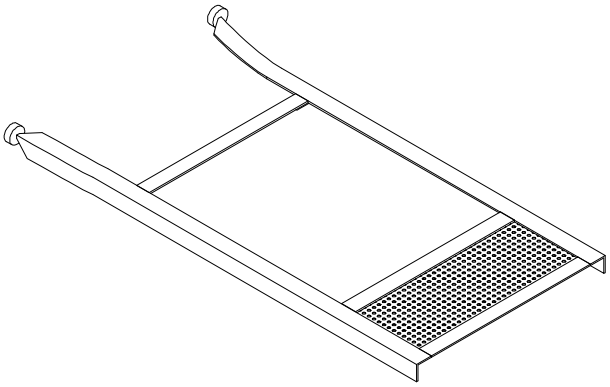

② **Left Side Frame - 1**

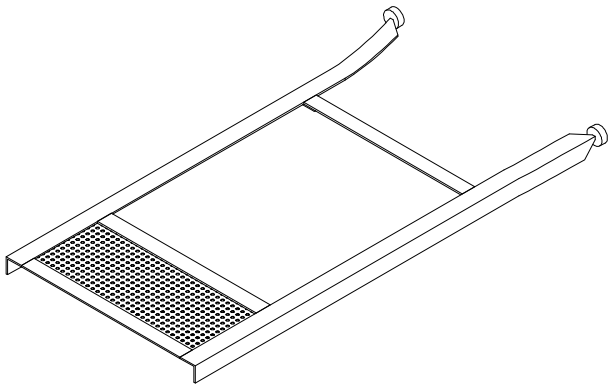

③ **Right Side Frame - 1**

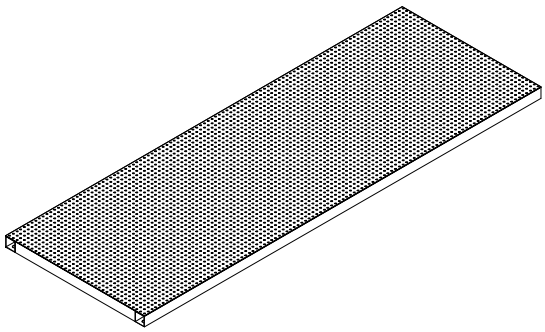

④ **Bottom Frame - 1**

Hardware Check List

Please take all the hardware listed below out of the hardware bag.

A

Allen Bolt - 4 (Ø1/4"×5/8"L)

B

Lock Washer - 4 (Ø1/4")

C

Flat Washer - 4 (Ø1/4"×16D)

D 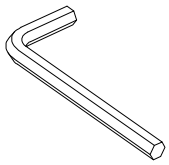

Allen Wrench - 1 (Ø1/4")

E

Screw - 10 (#8×5/8")

1. Attach Side Frame(2&3) to Top Frame(1) and Bottom Frame(4) . See figure below:

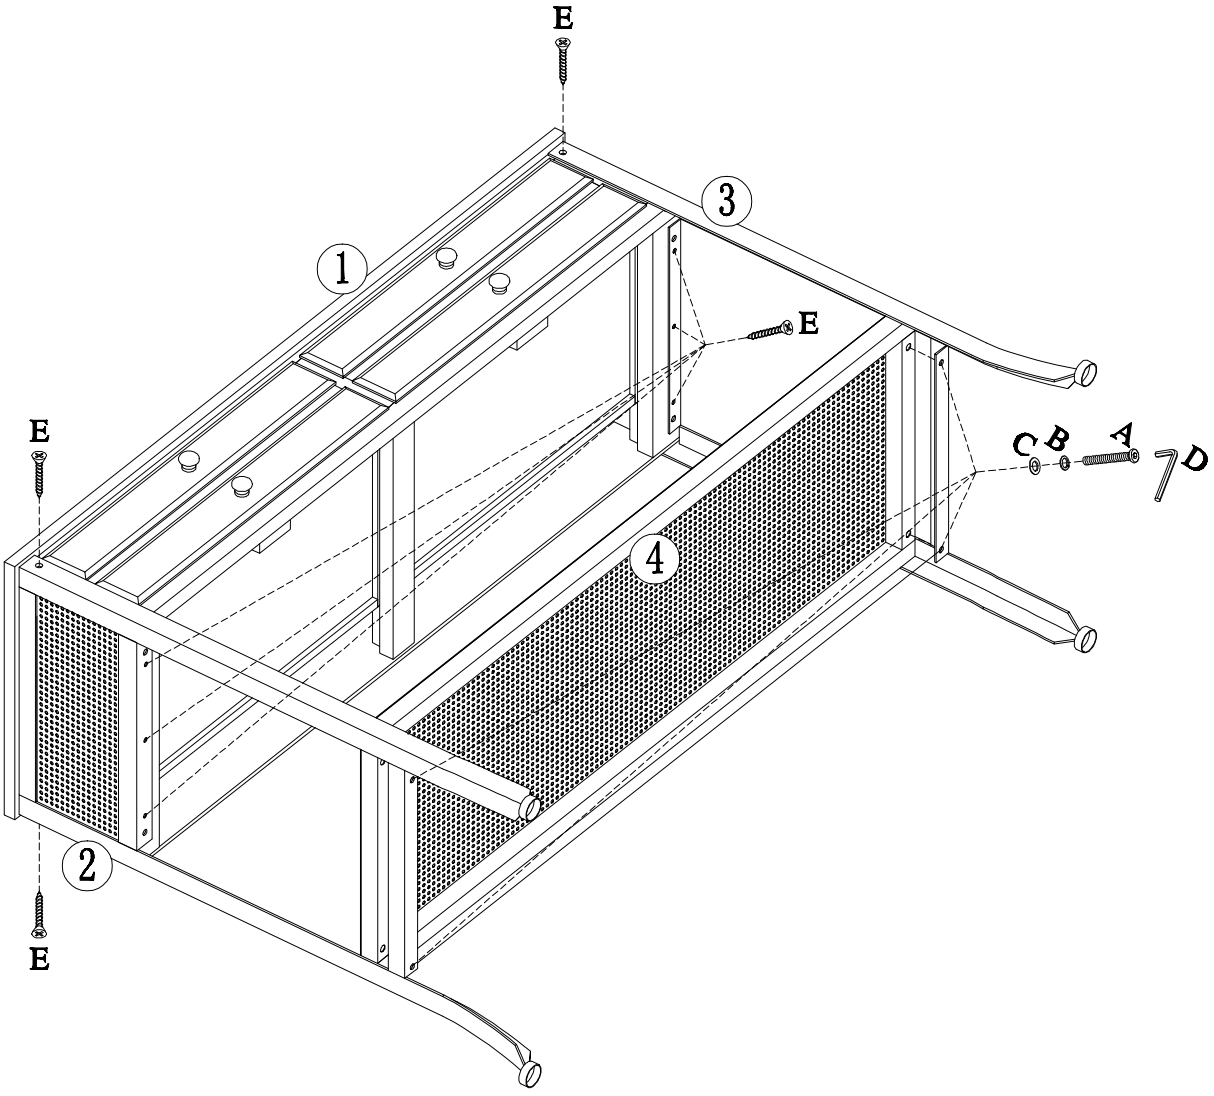

Assembly is now complete!